




# MANUAL DE INSTRUCCIONES

CIP-001RS (CÓD. 31692001)



## Partes de la cámara

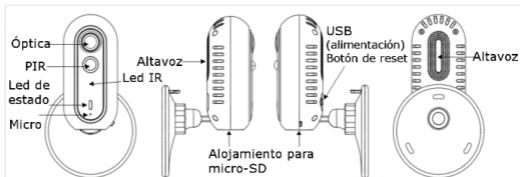

## Características:

- Visión panorámica de 150º
- Grabación de imágenes en tarjeta microSD (no incluida)
- Sensor de presencia PIR
- Envío de eventos a móvil (iOS y Android)
- Audio bi-direccional
- Cifrado de vídeo



## **Antes de comenzar la puesta en marcha:**

Esta cámara se asociará a su cuenta de usuario de la App SHOWMO (iOS y Android), por lo que, a partir de su puesta en marcha, quedará asociada a su perfil de usuario.

Si lo desea, puede compartir su cámara con cuantas personas desee, pero será usted el administrador y única persona que pueda ver grabaciones, hacer cambios en configuración y escuchar audio remotamente.



Por motivos de seguridad, una cámara que está asociada a un usuario no se puede asociar a otro diferente. Para asociarla a otro usuario debe contactar con nuestro distribuidor.

Para poner en marcha la cámara necesita que el móvil del usuario final esté conectado a la misma red wifi donde irá instalada la cámara (no funciona con redes 5G).



## **Puesta en marcha de la cámara:**

La puesta en marcha de la cámara es extremadamente sencilla. Siga los pasos que se describen a continuación:


- Conecte su cámara mediante el adaptador USB suministrado. A los pocos segundos escuchará dos pitidos de confirmación y el led parpadeará en color rojo. Si por cualquier motivo el led no se encuentra en este estado, pulse el botón de reset situado en la parte trasera y reinicie la cámara de nuevo.
- Instale la App SHOWMO en su móvil. Asegúrese que el móvil está conectado a



la misma red WIFI que desea conectar la cámara.

- Regístrese en SHOWMO pulsando en “Regístrate” y posteriormente introduciendo su email. Al pulsar en “Obtener”, recibirá en su bandeja de entrada un código de 6 cifras que deberá introducir en menos de 90s.

A screenshot of a mobile application's login and registration screen. At the top is a grey circle containing a white person icon. Below it are two input fields: the first is labeled 'Ingrese número celular/correo elect' and the second is labeled 'Contraseña' with a small eye icon to its right. A grey button labeled 'Iniciar Sesión' is positioned below the input fields. At the bottom left, the word 'Regístrate' is circled in red. To its right is the text '¿Has perdid...ontraseña?'.

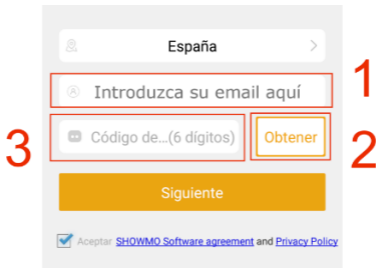

3

1

2

España >

Introduzca su email aquí


Código de...(6 dígitos) Obtener

Siguiente

Aceptar [SHOWMO Software agreement](#) and [Privacy Policy](#)

The image shows a registration form with three red boxes and two yellow boxes. Red box 1 highlights the email input field. Red box 2 highlights the 'Código de...(6 dígitos)' input field. Red box 3 highlights the 'Obtener' button. A yellow box highlights the 'Obtener' button. A yellow box highlights the 'Siguiente' button. A yellow box highlights the 'Obtener' button. A yellow box highlights the 'Obtener' button.

- Posteriormente la App le pedirá una contraseña para su cuenta. Confírmela.

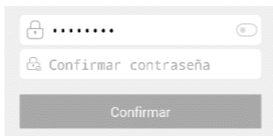

.....

Confirmar contraseña

Confirmar

The image shows a password confirmation form with a password input field containing seven dots, a 'Confirmar contraseña' input field, and a 'Confirmar' button.

Una vez hecho esto, ya puede acceder a la aplicación con sus credenciales. Pulse



en el símbolo de añadir cámara de la pantalla inicial.

Mi cámara



Seleccione el Modo inalámbrico inteligente.



Verifique que el led de la cámara continúa en rojo parpadeante. Si es así pulse “Siguiente” en la siguiente pantalla de la App (parte inferior).





A continuación, introduzca la contraseña wifi de su router doméstico y pulse “Siguiete”

 


Suba el volumen de su móvil y acérquelo a la cámara. Pulse “Siguiete”. Escuchará unos pitidos. Espere unos segundos, el led de la cámara pasará a color verde fijo y podrá escuchar “Camera ready”. A los



pocos segundos el led verde pasará a parpadeante.

Asigne un nombre a su cámara:



La configuración ha terminado. En unos segundos aparecerá su cámara en la lista.



**Acceso a cámara:** Pulse para ver su cámara.

 


Deslice para ver grabaciones


(1) Escuchar audio  
(2) Captura de foto  
(3) Pulsar para hablar  
(4) Grabación de vídeo  
(5) Selección de calidad

**Activar notificaciones:** Pulse para activar / desactivar notificaciones PUSH. Es importante comprobar que el estado de la App SHOWMO esté como “Protegida”

en el apartado “Aplicaciones protegidas” (Android).



 Podrá ver sus notificaciones en la parte inferior (apartado mensajes)



**Borrar:** Borra la cámara de su lista.

**Compartir:** Si desea que su cámara sea accesible con más usuarios (miembros de su familia, por ejemplo), comparta la



cámara con las cuentas que desee. La cuenta deberá existir previamente en SHOWMO. Los usuarios con los que comparta la cámara sólo podrán ver vídeo en directo y dar mensajes de audio.

**Configuración:** Acceso a la configuración detallada. Es importante comprobar que la configuración de zona horaria es GMT +1 en España, GMT+2 si se hace uso de horario de verano. Si desea dotar a su cámara de un nivel extra de seguridad, introduzca una contraseña en el campo de “Configuración de cifrado”. Esta contraseña se le pedirá cada vez que acceda a su cámara.



Si se desean hacer grabaciones acceda a “Información de la tarjeta microSD” y asegúrese que la cámara la detecta correctamente. Se recomienda formatear la tarjeta la primera vez (la cámara pierde la conexión mientras se realiza el formateo).

Para ver los vídeos y fotos descargados a su teléfono, acceda al apartado “Álbum” en la parte interior de la pantalla.






# USER MANUAL

CIP-001RS (CODE 31692001)





## Camera parts:

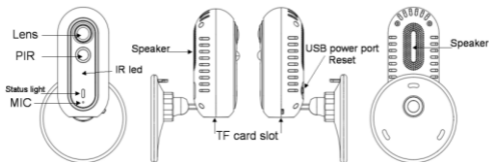

## Characteristics:

- Panoramic view of 150°.
- Record images to microSD card (not included)
- PIR sensor
- Events to mobile (iOS and Android)
- Bi-directional audio
- Video encryption





## **Before to start:**

This camera will be associated with your SHOWMO App user account (iOS and Android), so as soon as it is launched, it will be associated with your user profile.

If you wish, you can share your camera with as many people as you like, but you will be the administrator and the only person who can view recordings, make changes to settings and listen to audio remotely.

For security reasons, a camera that is associated with one user cannot be associated with another. To associate it



with another user you must contact our distributor.

To start the procedure, the end user's mobile phone must be connected to the same wifi network as the camera (it does not work with 5G networks)

### **Setting up the camera:**

The camera is extremely easy to set up. Follow the steps below:

Connect your camera using the supplied USB adapter. After a few seconds you will hear two confirmation beeps and the LED will blink red. If for any reason the led is



not in this state, press the reset button on the back and restart the camera again.

Install the SHOWMO App on your mobile. Make sure your mobile phone is connected to the same WIFI network you want to connect the camera to.

Sign up for SHOWMO by clicking on "Obtain" and then entering your email address. When you click on "Get", you will receive a 6-digit code in your inbox, which you must enter in less than 90s.

A screenshot of a sign-in screen. It features two input fields: "Enter mobile phone number/email" and "Enter password". Below these is a grey "Sign in" button. At the bottom, there are two links: "Sign up" (circled in red) and "Forgot password?".A screenshot of a verification screen. It has three main sections: 1. An input field for "Enter email" (labeled with a red "1"). 2. A box containing a "Verification...e(6 digits)" input field and an "Obtain" button (labeled with a red "2"). 3. A large orange "Next" button (labeled with a red "3"). At the bottom, there is a checkbox labeled "Accepted" followed by links to "SHOWMO Software agreement" and "Privacy Policy".

The App will then ask you for a password for your account. Please confirm it.

A screenshot of a mobile application interface for setting a password. It features two input fields: the first is labeled "New password(6...characteres)" and the second is labeled "Confirm password". Both fields have a small lock icon on the left. Below the fields is a grey button with the text "Confirm".

Once you have done this, you can access the application with your credentials. Click on the add camera symbol on the home screen.




Select Smart wireless mode.





Verify that the camera LED continues blinking red. If so, click "Next" on the next screen of the App (bottom).

Then enter your home router's wifi password and click "Next".

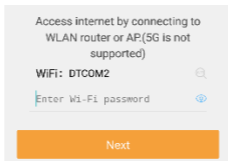


Turn up the volume on your mobile and bring it closer to the camera. Click "Next". You will hear a few beeps. Wait a few seconds, the camera LED will turn steady green and you will hear "Camera ready".




After a few seconds the green led will flash.

 Assign a name to your camera:




The configuration is complete now. In a few seconds your camera will appear in the list.

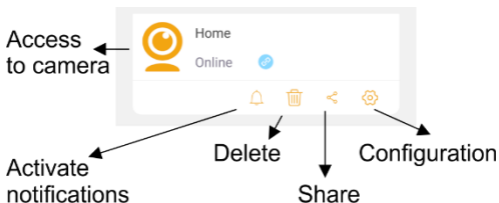

**Camera access:** Press to view your camera.

Swipe to view recordings



 
(1) Listen audio  
(2) Photo capture  
(3) Push to talk  
(4) Video recording  
(5) Quality selection

**Activate notifications:** Press to activate / deactivate PUSH notifications. It is important to check that the status of the





SHOWMO App is set to "Protected" in the "Protected Applications" section (Android).



You can see your notifications at the bottom (messages section)



**Delete:** Deletes the camera from its list.

**Share:** If you want your camera to be accessible to more users (family members, for example), share the



camera with the accounts you want. The account must previously exist in SHOWMO. Users with whom you share the camera will only be able to view live video and give audio messages.

**Configuration:** Access to the detailed configuration. It is important to check that the time zone setting is GMT +1 in Spain, GMT+2 if using daylight saving time. If you want to give your camera an extra level of security, enter a password in the "Encryption settings" field. You will be asked for this password each time you access your camera.



If you want to make recordings, access "microSD card information" and make sure the camera detects it correctly. It is suggested to format the card the first time (the camera will lose connection while formatting is being performed).

To view the downloaded videos and photos on your phone, go to the "Album" section on the inside of the screen.

