


USER MANUAL



Art 4/G2+ monitor
Hands-free
2-wire installation

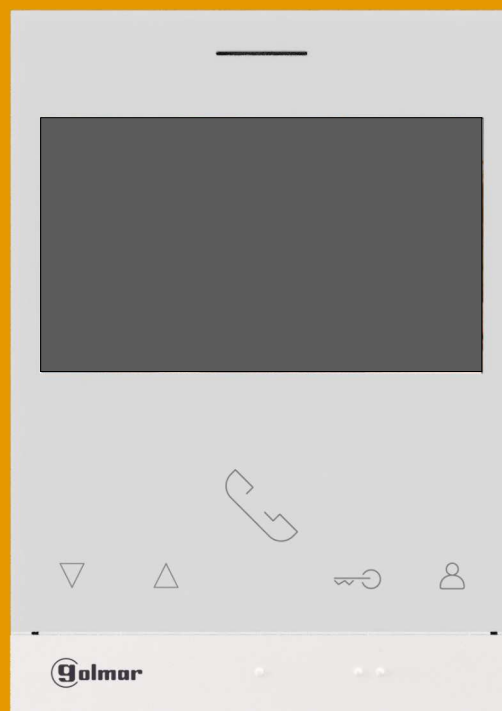


CONTENTS


Contents	2
Recommendations.....	2
System operation	2
Art 4/G2+ monitor.....	3 to 23
Description	3
Installation	4
Installation terminals	4
Configuration switches.....	4
Main menu	5
Settings menu	6 to 11
Recording mode settings screen	11
Automatic deletion of images/videos, internal memory and MicroSD card screen	12 to 13
Door panel call screen	14
Communication screen	15
Image and communication settings	16 to 18
Intercom menu	19 to 20
Recordings menu	21 to 23
Special codes	24 to 25
Cleaning the monitor	26
Notes	27



RECOMMENDATIONS





- Preferably use a Golmar **RAP-GTWIN/HF** cable (2x1mm²).
- The wiring must run at least **40cm away from any other wiring**.
- **Always disconnect the power supply** before making modifications to the device.
- The installation and handling of these devices must be carried out by **authorised personnel**.
- Check all connections before starting the device.
- Always follow the instructions contained in this manual.




SYSTEM OPERATION

To make a call, the visitor needs to press the door panel button: an audible tone will indicate that the call is being made and LED  on the door panel will illuminate. At this moment, the apartment's monitor(s) receive(s) the call.

In systems with more of two accesses doors (**in villa applications (Kit S5110/ART7 1P & Kit S5110/ART7W 1P) with SOUL door panels with version V04 or later**), the other(s) door panel(s) automatically disconnects; if another visitor attempts to call, a number of telephone tones will indicate that the system is busy and LED  on the door panel will illuminate.

Upon receiving the call, the image will appear on the screen of the master monitor (and slave 1, if it exists) without the visitor knowing and icon  displayed on the screen will blink green. To view the image from slave monitors 2 or 3, press one of the buttons of the monitor to display the image. If the call is not answered within 45 seconds, door panel LED  will turn off and the system will become free.


To establish communication, press the button below off-the-hook icon  shown on the screen. Door panel LED  will illuminate. Communication will last for 90 seconds or until the button below on-the-hook icon  shown on the screen is pressed. When communication has ended, door panel LED  will turn off and the system will become free.

To open door  or activate auxiliary output  of the door panel, press the button below the corresponding icon displayed on the screen. A single press activates the lock release or auxiliary output for 3 seconds, and LED  on the door panel illuminates.

Detailed operation of the monitor is described on pp. 5-23.

The owner of the apartment can activate the lock release by holding the proximity key over the reader. If the proximity key is held for three seconds, the auxiliary relay output will be activated.

DESCRIPTION

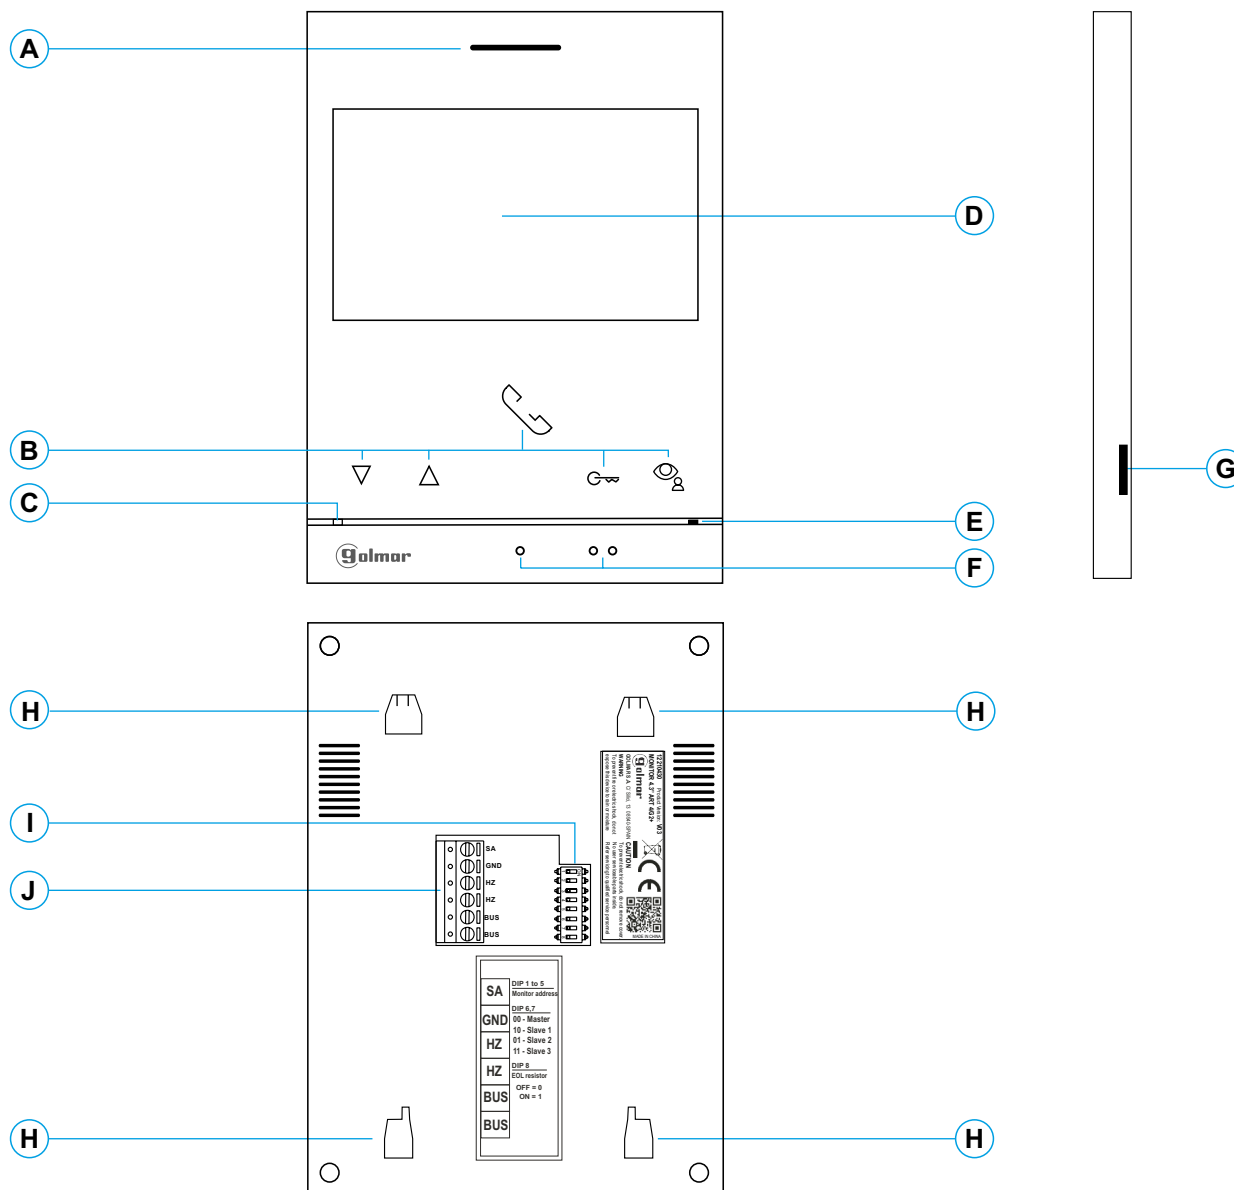

A. Speaker.

B. Function buttons, access and selection of menu functions.

The function of each button is shown on the monitor screen with an icon located just above each button (see pp. 5 to 23).

* Press to access 'Doctor mode' function (standby monitor):

- With the special code '0441' (Doctor mode) already entered (see pp. 24 to 25), press the button for 5 sec. to activate/ deactivate the function.
- The push button led will blink in white color if the function 'Doctor mode' is activated and it will turn off if the function is deactivated.

* Press to access the recordings menu (standby monitor):

- The push button led will blink in white color indicating that a photo/video is pending viewing. Pressing will access the recordings menu.

*** ART4 G2+ monitor with V.03 and next.**

C. Monitor status LED:

Yellow ON: Standby without notification.
Red ON: "Do not disturb" Mode activated.

D. 4.3" TFT colour screen.

E. Microphone.

F. Raised dots for the visually impaired people.

In call/communication:

- Above this raised dot is the 'Start/End communication' button.
- Above these raised dots is the 'Door opening' button.

G. Micro SD card slot (not included).

Type: MicroSD Class 10 from 4GB to 128GB.

H. Wall mounting connector fixing (x4).

I. Configuration switches.

J. Installation terminals.

INSTALLATION


Avoid dusty or smoky environments or locations near sources of heat.

For proper installation, use the template supplied with the product.

1. Position the top of the template at a height of 1.65m.
2. If you are going to use an embedding box to pass the wiring through, make sure that it is in line with the holes corresponding to the box model chosen and fix the connector. If you prefer to fix the connector directly to the wall, make four 6mm holes at the points indicated (A), insert the wall plugs supplied and screw in the connector.
3. Pass the installation wires through the middle hole and connect them to the removable terminals as shown in the wiring diagrams. Before connecting the removable terminals to the monitor, configure the switch as indicated below.
4. Connect the removable terminals to the monitor and place the monitor in front of the connector, making sure the fixings line up. Move the monitor downwards to secure it.

INSTALLATION TERMINALS (J)

For ease of installation, the installation terminals are removable and supplied in a separate bag. Once the terminals are wired, place them in position.

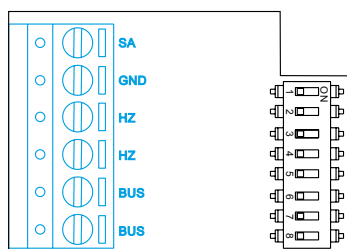

BUS, BUS: Communication BUS (non-polarised).

SA, GND: Auxiliary call repeater output (max 50mA/12V), relay SAR-12/24.

HZ, HZ: Apartment front door button input:

Connect only on the master monitor. The signal received is then transmitted to the slave monitors in the same apartment through the BUS.


CONFIGURATION SWITCHES (I)

Switches 1 to 5.

These assign the address of the corresponding monitor to its call button on the door panel. Switches 4 to 5 must remain in the OFF position.


*** Note: The ART 4/G2+ monitor mounted with the SOUL S5110/ART 4 1P KIT only allows 1 apartment.**

Apartment 1 (Dip 1 to ON) ART4 G2+ with V.03 and next.

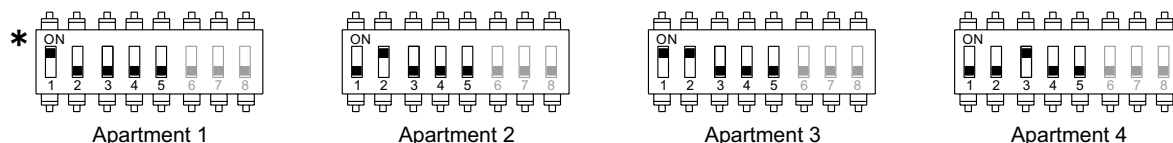

Switches 6 and 7.


These define whether the monitor is master or slave. Each apartment must have one master monitor, and only one.

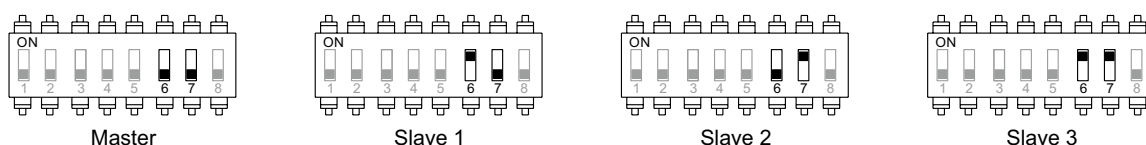

Switch 8.

This activates the end-of-line resistance in the ON position. Activate it in monitors where the bus cable ends. Deactivate it only in intermediate monitors.

MAIN MENU

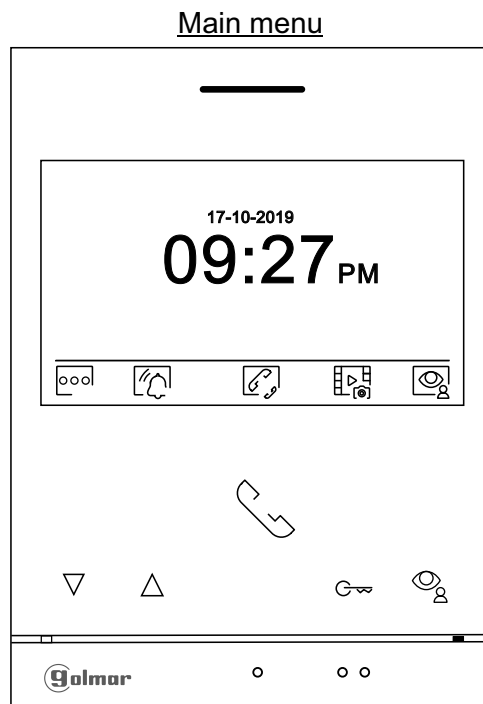

If the device is in standby (screen switched off), to access the main menu, press any of the buttons of the monitor. Then press the button located just below the corresponding icon. The device will return to standby mode after 10 seconds without activity.




Press the button below icon  to make changes to the system settings (see pp. 6 to 11).



Disabled




Enabled


Press the button below icon  for 3 seconds to enable and for 1 second to disable the 'Do not disturb' function: If the monitor is in 'Do not disturb' mode, the status LED will illuminate (red) and the ringtone on the monitor will not sound when a call is received.

To set a period of time for 'Do not disturb' mode (see p. 8 to 9).



Press the button below icon  to access the menu of the intercom between other monitors in the same apartment or other apartments (see p. 19 to 20). **Note: The ART 4/G2+ monitor mounted with the SOUL S5110/ART 4 1P KIT does not allow external intercom.**



Press the button below icon  to display the list of images recorded in the memory of the device. If a MicroSD card is inserted in the monitor, images/videos will be recorded on the MicroSD card (see pages 11, 12 to 13 and 21 to 23).






There are no images/videos pending viewing.




There are images/videos pending viewing.



Indicates that the inserted MicroSD card must be formatted from the monitor. Access this function by pressing the button below icon  to access the MicroSD card formatting menu, then press the button below icon  to start formatting the MicroSD card. To exit without formatting, press the button below icon .



Press the button below icon  to display the image from the master door panel. Note: This enables the door panel camera to be changed, the audio on the corresponding door panel to be activated and the door to be opened (see p. 14).

SETTINGS MENU



Returning to the main menu: Press the button below icon to return to the main menu.



To access the settings menu 2nd screen:

Press the button below icon to access the 2nd settings screen.




No function.





The 'About' screen provides information about the monitor, such as the software version, address and whether it is master or slave (M, S1, S2 or S3). It enables updated versions of the manual to be downloaded to a mobile or tablet, for which it is necessary to have a QR code scanner app installed. It enables the monitor to be restored to factory settings, such as melodies, call volume, etc. Press the button below icon to return to the settings menu 1st screen.


Settings menu 1st screen

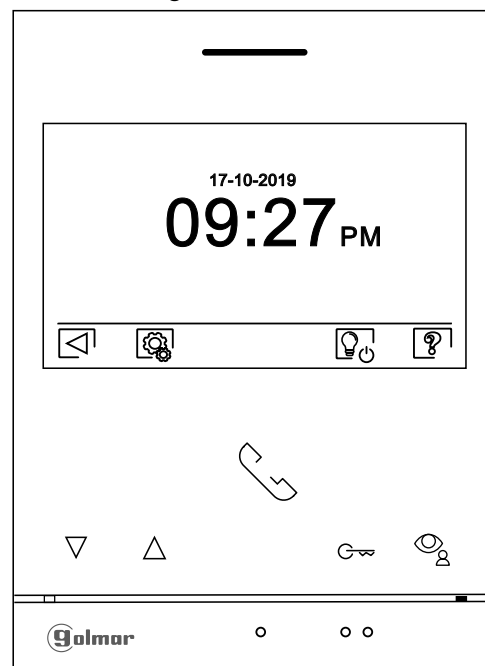

Settings menu 1st screen

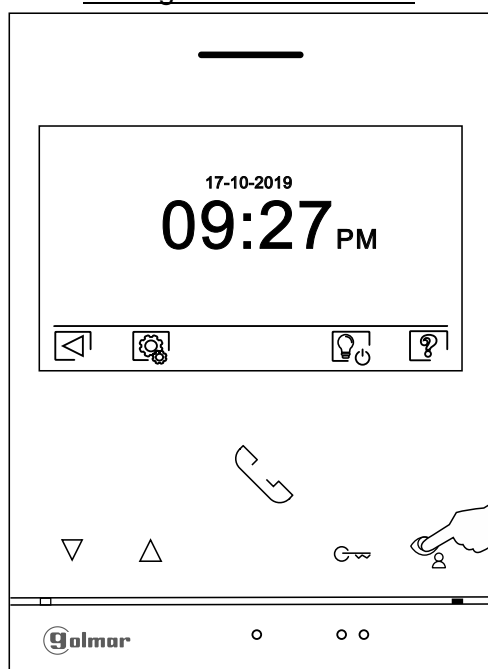

'About' screen

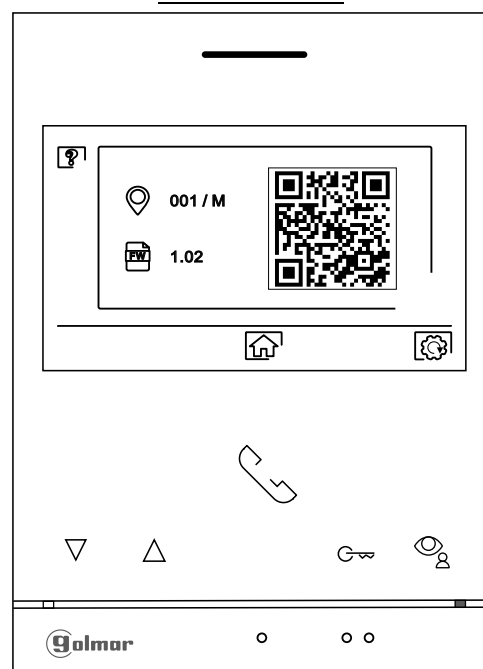

To restore the monitor to factory settings, press the button below icon to access the factory reset menu, then press the button below icon to perform this function. Press the button below icon to return to the 'About' screen.




Press the button below icon to return to the settings menu 1st screen.



SETTINGS MENU




To access the settings menu 2nd screen:



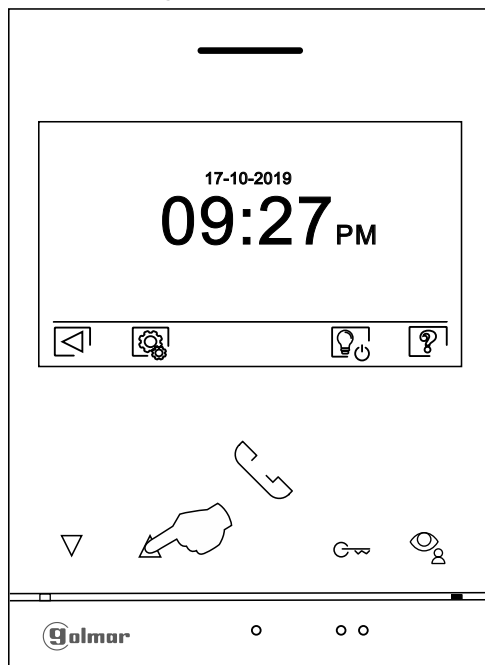

Press the button below icon  to access the 2nd settings screen.

Settings menu 1st screen


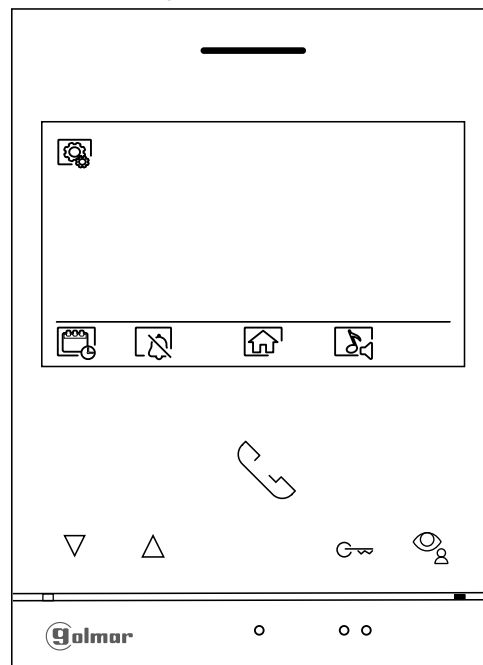


Settings menu 2nd screen




Setting the monitor's date and time, as well as the presentation format: Press the button below icon  to access the settings screen. Go to the option to be modified by pressing the buttons below corresponding icons  / , then select the option to modify by pressing the button below icon .

Settings menu 2nd screen

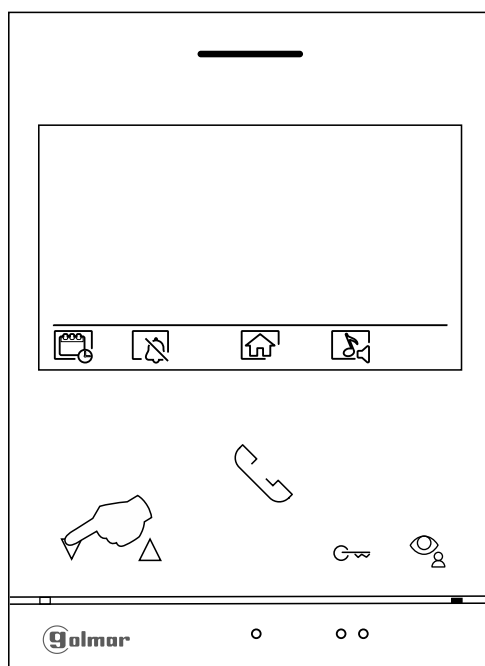






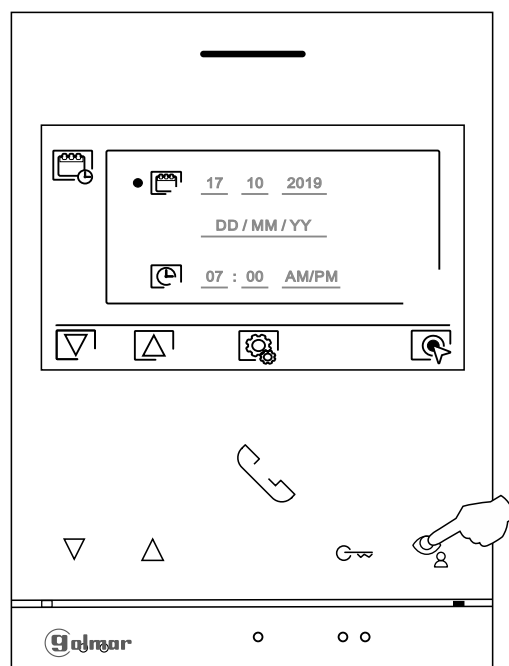
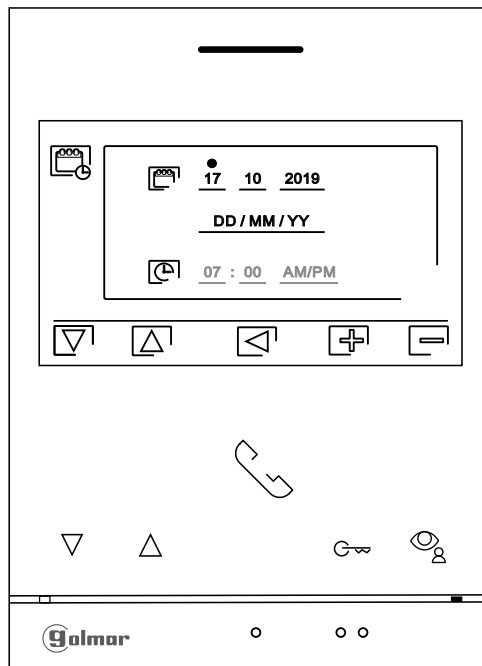
Option selection screen




Continued from previous page.


SETTINGS MENU

Select the field to be modified by pressing the buttons below corresponding icons  / , then press the buttons below corresponding icons  /  to adjust the value/format. Validate the changes made by pressing the button below icon . After setting the desired values, press the button below icon  to return to the settings menu 2nd screen.





'Do not disturb' mode and 'automatic door opening' settings: Press the button below icon  to access the settings screen.

Settings menu 2nd screen

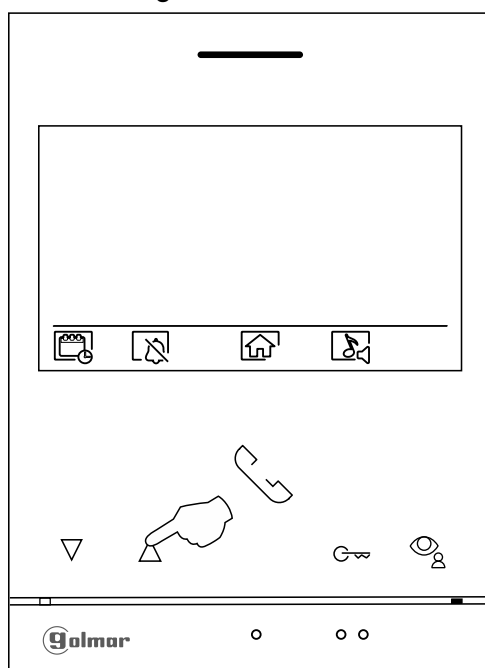

Option selection screen

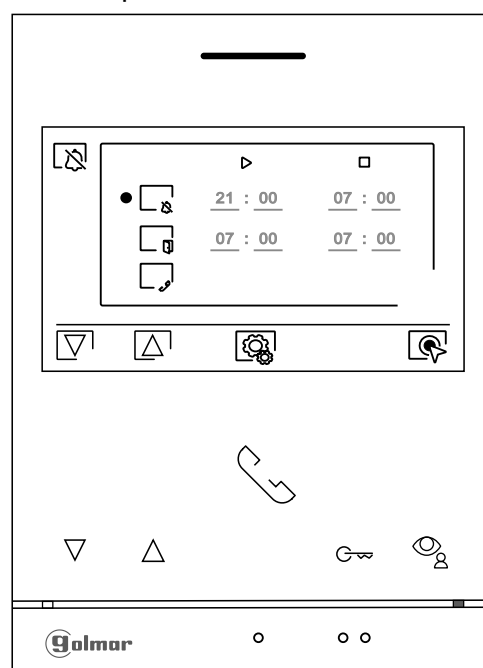

Continued overleaf

Continued from previous page.

SETTINGS MENU



To set a period of time in which the monitor will not sound when receiving calls, go to the option with icon by pressing the buttons below corresponding icons / and select the option to be modified by pressing the button below icon . Then select the field to be modified by pressing corresponding buttons / , modify the desired period of time by pressing the buttons below corresponding icons / and validate the changes made by pressing the button below icon . Press the button below icon to return to the settings menu 2nd screen.




To set a period of time for automatic door opening (after 3 seconds of receiving a call from the door panel), go to the option with icon by pressing the buttons below corresponding icons / and select the option by pressing the button below icon . Then you can set a period of time for opening the door, select the field to be modified by pressing corresponding buttons / , modify the desired period of time by pressing the buttons below corresponding icons / and validate the changes made by pressing the button below icon . Press the button below icon to return to the settings menu 2nd screen. **(This function is disabled by default. To enable it, see pp. 24-25).**




To enable/disable the intercom function between apartments, go to the option with icon by pressing the buttons below corresponding icons / . Then press the button below icon to enable / disable this function. Press the button below icon to return to the main menu. **(This function is disabled by default).**

Note: The ART 4/G2+ monitor mounted with the SOUL S5110/ART 4 1P KIT does not allow this function.

Option selection screen

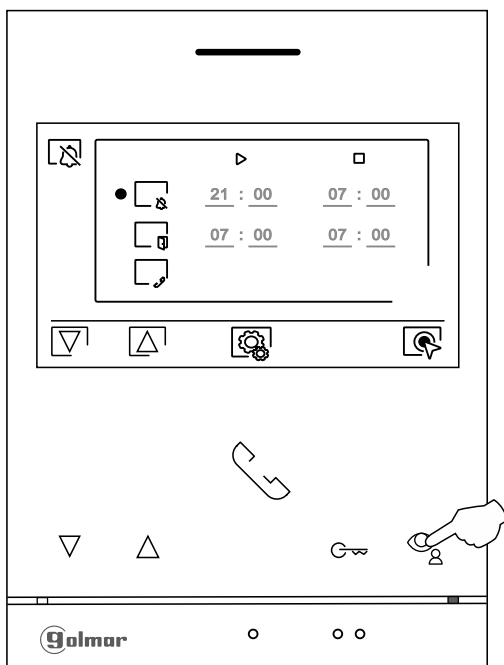







Time period setting screen

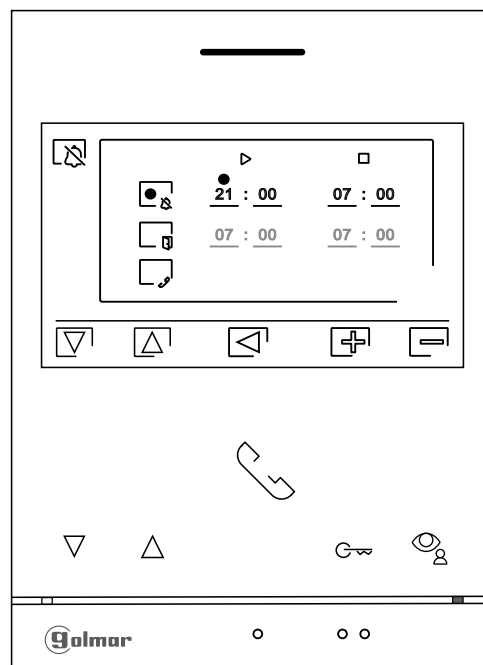


SETTINGS MENU




Selecting the melody and call volume: Press the button below icon  to access the settings screen. In order to identify the origin of the calls when you are not in front of the monitor, select different melodies and the desired call volume. Go to the option to be modified by pressing the buttons below corresponding icons  / , then press the buttons below corresponding icons  /  to select the melodies and desired call volume. Press the button below icon  to return to the settings menu 2nd screen.

Important: Door panels  and  have no use in apartment applications with (KIT S5110/ART4 1P) SOUL door panels.

Settings menu 2nd screen

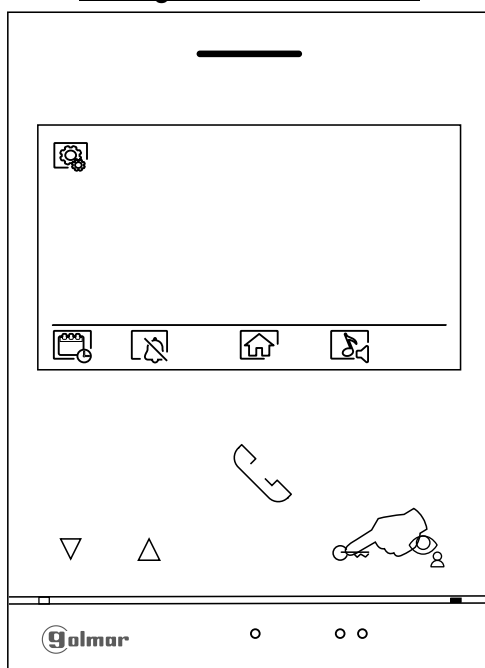


Option selection screen

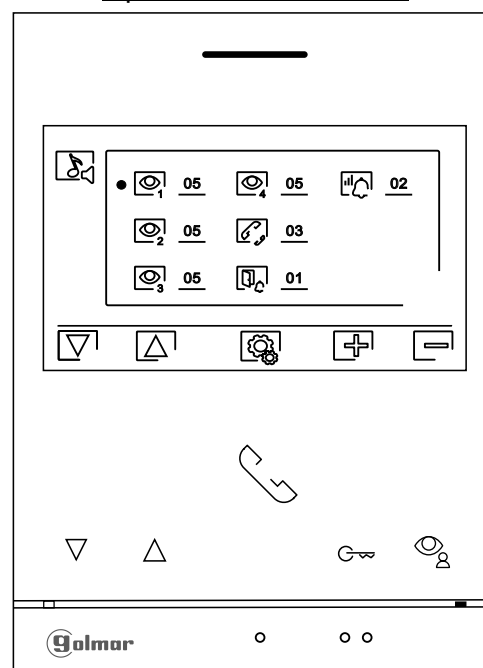


Press the button below icon  to return to the settings menu 1st screen.

Settings menu 2nd screen

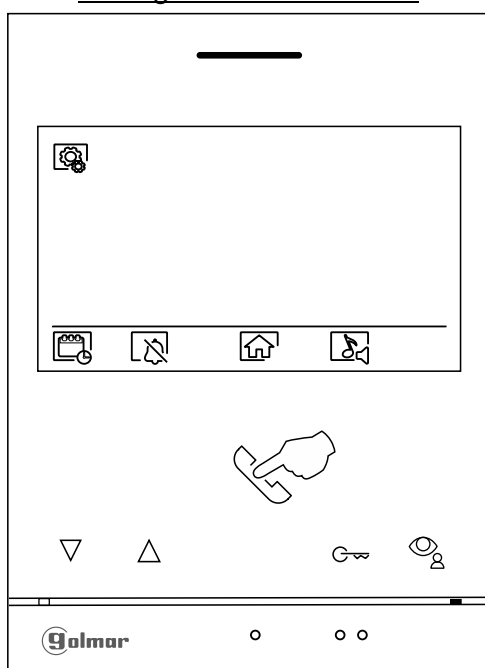

Settings menu 1st screen

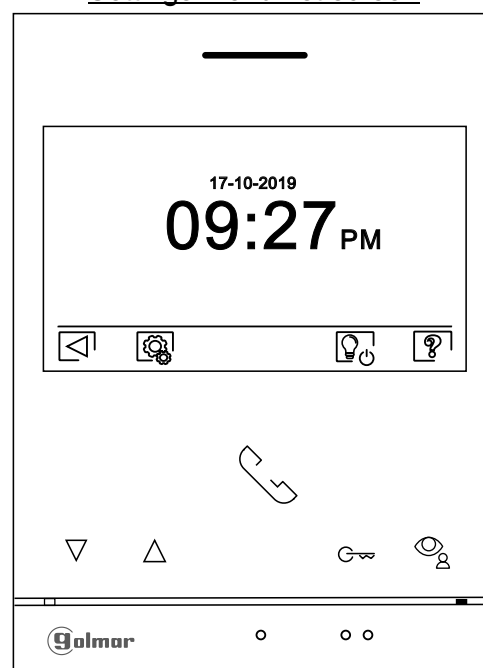


Continued from previous page.


SETTINGS MENU

Then press the button below icon  to return to the main menu.

Settings menu 1st screen

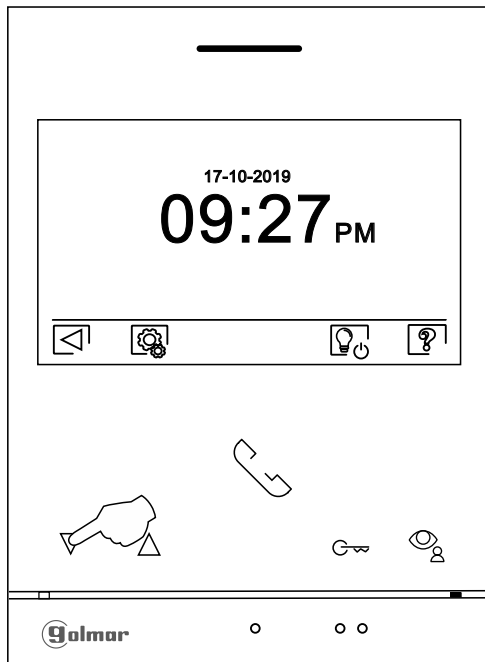









Main menu

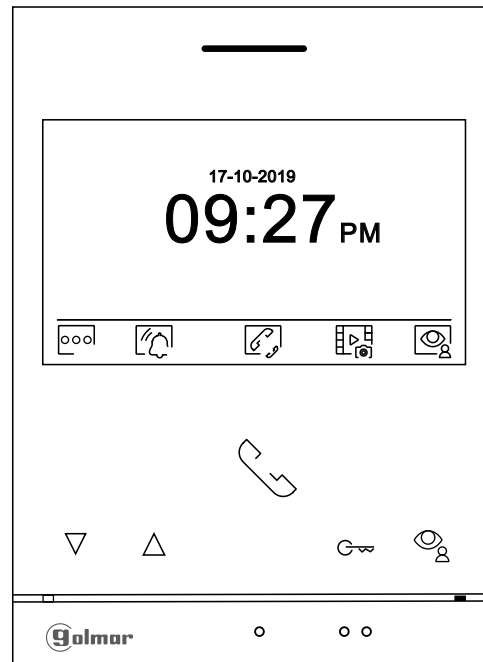


RECORDING MODE SETTINGS SCREEN




Recording mode settings: Access the recordings menu as described on p. 5. Then press the button below icon  to access the settings screen.

Press the buttons below icons / to select image recording mode during call reception: no recording , still image  or video . The latter is only available when a MicroSD card is inserted. To return to the recordings menu, press the button below icon . Then, to return to the main menu, press the button below icon .

Recordings menu

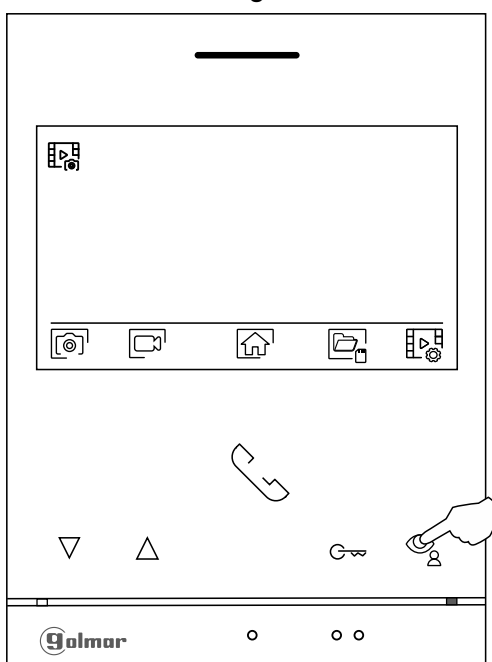

Settings screen

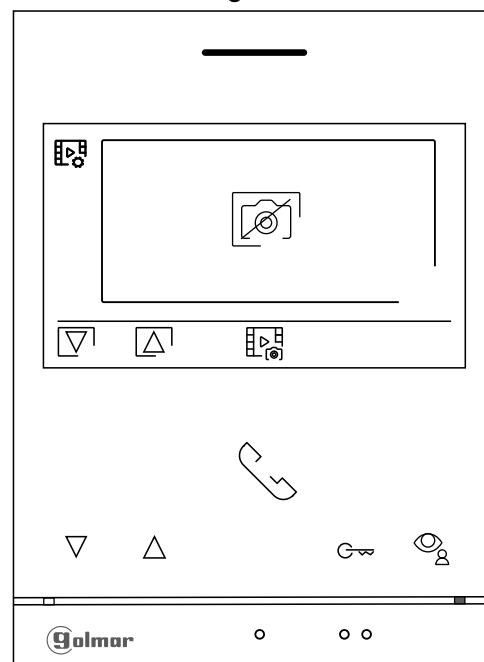

AUTOMATIC DELETION OF IMAGES/VIDEOS, INTERNAL MEMORY AND MICROSD CARD SCREEN




Automatic deletion of images/videos, internal memory and MicroSD card: Access the recordings menu as described on p. 5. Press the button below icon to access the selection screen. In some countries, the law does not permit the storage of images or videos for more than 30 days after recording. The automatic deletion function performs this task for you. You can disable this function if your country's legislation does not require it, or under your responsibility.

If you have not inserted a MicroSD card into your monitor, only still images can be recorded in the internal memory of the monitor (up to 100). If you have inserted one, the images and videos will always be recorded on the card, and the images in the internal memory cannot be displayed until you copy them to the card.


From this menu, you can select delete contents, copy from the internal memory to the MicroSD card and format the card. Any of these actions (copy/delete) will require confirmation.

Press the button below icon to return to the recordings menu.

Recordings menu

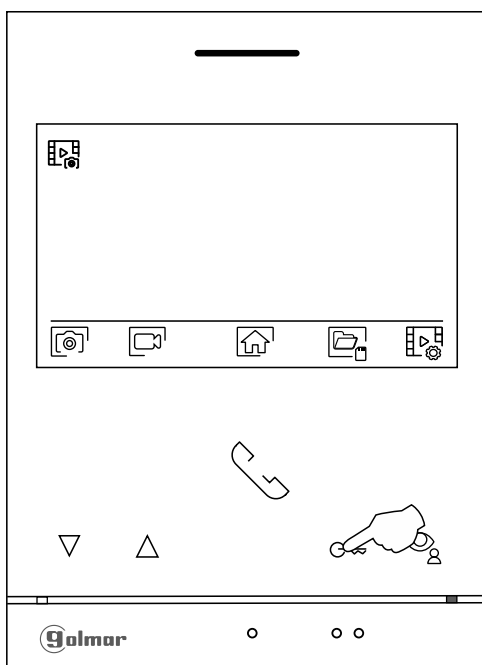

Option selection screen

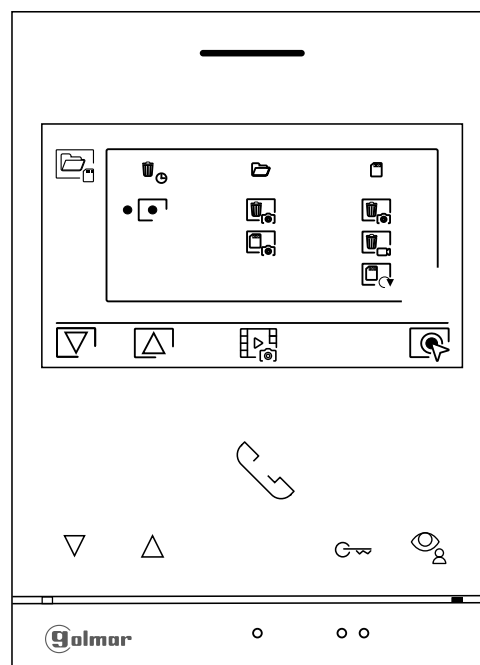

In some countries, the law does not permit the storage of images or videos for more than 30 days after recording. The automatic deletion function performs this task for you. You can disable this function if your country's legislation does not require it, or under your responsibility. To disable this function, go to the option to be modified by pressing the buttons below corresponding icons / , then press the button below icon to enable/disable the automatic deletion function. Press the button below icon to return to the recordings menu.



If you have inserted a MicroSD card into the monitor, you can copy still images previously recorded on the monitor to the new MicroSD card and then delete the still images from the internal memory of the monitor. Press the button below icon to return to the recordings menu.



To copy still images recorded on the monitor to the MicroSD card, go to the option with icon by pressing the buttons below corresponding icons / . Press the button below icon to access the menu for copying images to the card, then press the button below icon to perform this function. To exit without copying images, press the button below icon .



To delete still images recorded in the internal memory of the monitor, go to the option with icon by pressing the buttons below corresponding icons / . Press the button below icon to access the still image deletion menu, then press the button below icon to perform this function. To exit without deleting images, press the button below icon .

Continued from previous page.

AUTOMATIC DELETION OF IMAGES/VIDEOS, INTERNAL MEMORY AND MICROSD CARD SCREEN



If you have inserted a MicroSD card into the monitor, you can delete the still images and videos recorded on the MicroSD card. The monitor has the option to format the MicroSD card. Press the button below icon to return to the recordings menu.



To delete still images recorded on the MicroSD card, go to the option with icon by pressing the buttons below corresponding icons / . Press the button below icon to access the still image deletion menu, then press the button below icon to perform this function. To exit without deleting images, press the button below icon .






To delete videos recorded on the MicroSD card, go to the option with icon by pressing the buttons below corresponding icons / . Press the button below icon to access the video deletion menu, then press the button below icon to perform this function. To exit without deleting videos, press the button below icon .



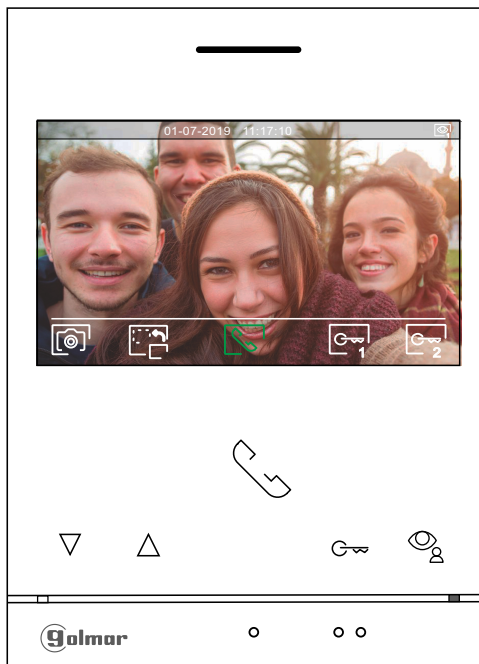





To format the MicroSD card, go to the option with icon by pressing the buttons below corresponding icons / . Press the button below icon to access the card formatting menu, then press the button below icon to perform this function. To exit without formatting the card, press the button below icon .

DOOR PANEL CALL SCREEN




This screen is displayed when receiving a call or pressing the button below icon  of the main menu. During a call, icon  displayed on the screen will blink green (during the call process). In the top centre of the screen, the date and time are shown and, on the right, the source of the image is displayed (from door panel 1 to door panel 4 or camera 1 to camera 4, see pages 24 - 25). The call has a duration of 45 seconds.





Press the button below icon  for 3 seconds to access the image and monitor in communication volume settings menu. Select the option to be modified by pressing the buttons below corresponding icons  / , change to the desired level by pressing the buttons below corresponding icons  /  and validate the changes made by pressing the button below icon , (see pp. 16 - 18).




Press the button below icon  to change the source of the image as long as the system has more than one door panel or has an external camera connected and display has been activated (see pp. 24 - 25). It is possible to make the change during display, call and communication processes.




Press the button below icon  /  to start or end audio communication with the door panel displayed respectively. Communication has a maximum duration of 90 seconds. Once communication has ended, the screen will turn off.







Press the button below icon  to activate the lock release (or device connected to the CV output of the door panel) for 3 seconds (factory setting, contact our technical support department).




Press the button below icon  to activate the lock release (or device connected to the relay output of the door panel) for 3 seconds (factory setting, contact our technical support department).



A few seconds after receiving a call, it automatically takes a photograph. In the top left of the screen, icon  is displayed. Press the button below icon  to take a photograph.



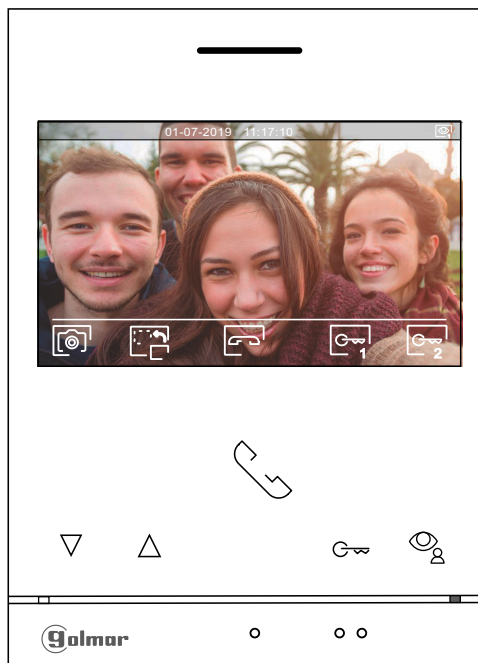



If a MicroSD card is inserted, a 15-second video automatically starts recording a few seconds after receiving the call. In the top left of the screen, icon  is displayed (see p. 11 to configure video recording mode). Then a short 1-second press on the button below icon  will take a photograph or a long 2-second press will record a video.

COMMUNICATION SCREEN




This screen is displayed during a communication process. In the top centre of the screen, the date and time are shown and, on the right, the source of the image is displayed (from door panel 1 to door panel 4 or camera 1 to camera 4, see pages 24 - 25).





Press the button below icon  for 3 seconds to access the image and monitor in communication volume settings menu. Select the option to be modified by pressing the buttons below corresponding icons  / , change to the desired level by pressing the buttons below corresponding icons  /  and validate the changes made by pressing the button below icon , (see pp. 16-18).




Press the button below icon  to change the source of the image as long as the system has more than one door panel or has an external camera connected and display has been activated (see pp. 24-25). This enables the door panel camera to be changed, the audio of the corresponding door panel to be activated and the door to be opened.




Press the button below icon  /  to start or end audio communication with the door panel displayed respectively. Communication has a maximum duration of 90 seconds. Once communication has ended, the screen will turn off.



Press the button below icon  to activate the lock release (or device connected to the CV output of the door panel) for 3 seconds (factory setting, contact our technical support department).



Press the button below icon  to activate the lock release (or device connected to the relay output of the door panel) for 3 seconds (factory setting, contact our technical support department).



Press the button below icon  to take a photograph. In the top left of the screen, icon  is displayed.










Note: If a MicroSD card is inserted, a 15-second video automatically starts recording a few seconds after **receiving the call**. In the top left of the screen, icon  is displayed (see p. 11 to configure video recording mode). Then a short 1-second press on the button below icon  will take a photograph or a long 2-second press will record a video.

IMAGE AND COMMUNICATION SETTINGS

During a call/communication process, press the button below icon  for 3 seconds to access the image and monitor in call/communication volume settings menu.




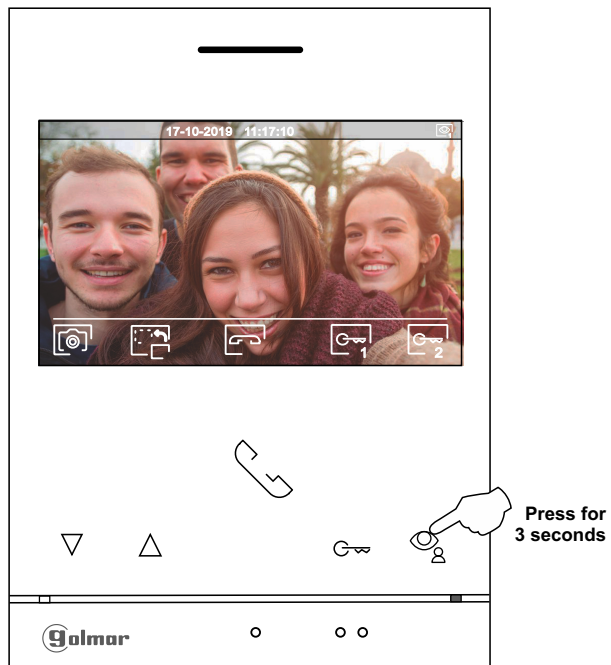


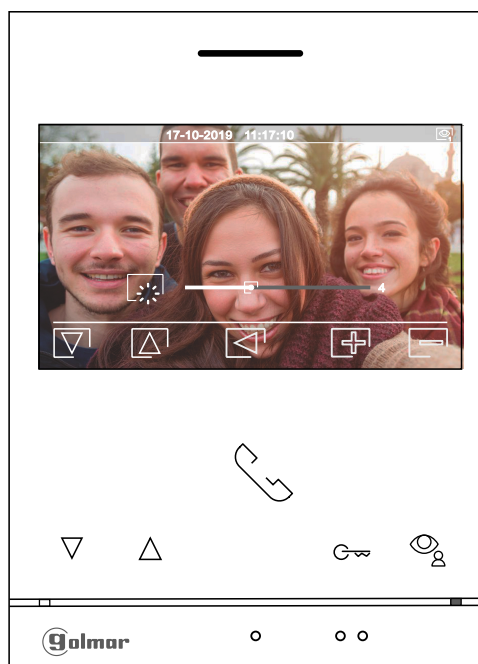
The following brightness control menu will then be displayed. Adjust to the desired level by pressing the buttons below icons  / . To access the contrast control, press the button below icon . To exit the image and communication settings menu, press the button below icon .








Continued from previous page.

IMAGE AND COMMUNICATION SETTINGS

The following contrast control menu will then be displayed. Adjust to the desired level by pressing the buttons below icons  / . To access the colour control, press the button below icon . To exit the image and communication settings menu, press the button below icon .

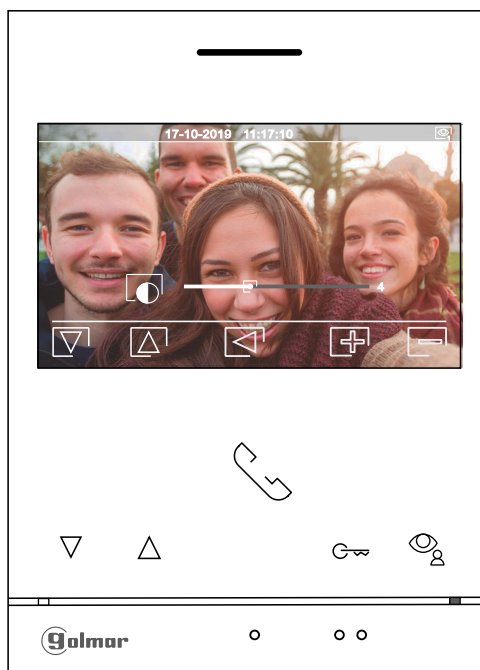

The following colour control menu will then be displayed. Adjust to the desired level by pressing the buttons below icons  / . To access the monitor call tone / communication volume control, press the button below icon . To exit the image and communication settings menu, press the button below icon .


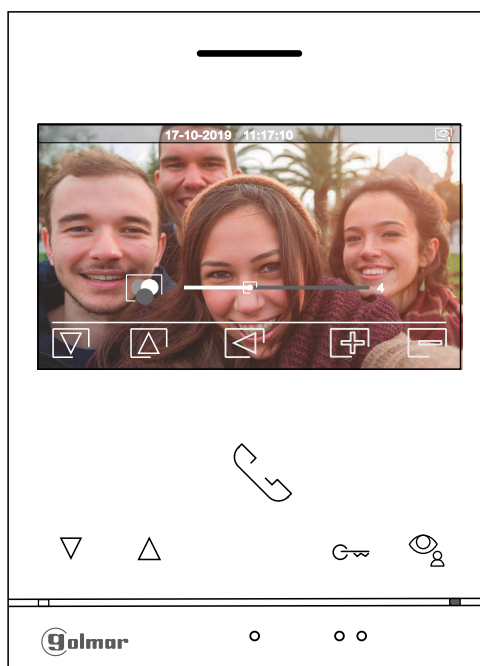


Continued overleaf




Continued from previous page.

IMAGE AND COMMUNICATION SETTINGS

The following call tone settings volume during a call process (**Screen A**) or communication settings volume during a communication process (**Screen B**) will then be displayed. Adjust to the desired level by pressing the buttons below icons / . To return to the brightness control (carousel mode), press the button below icon .

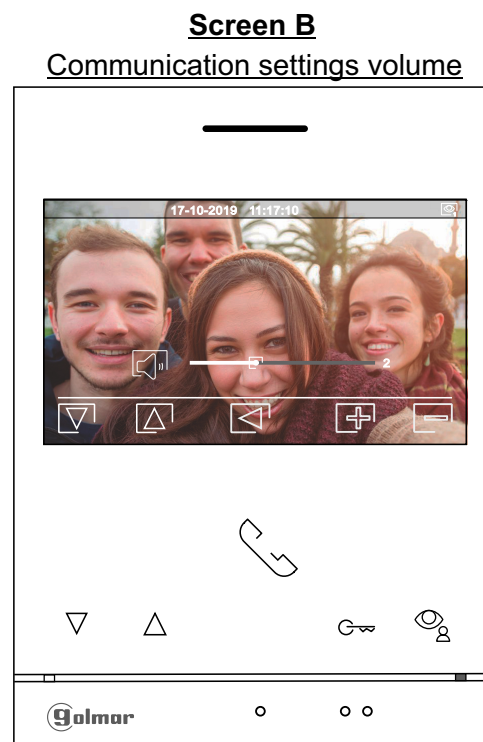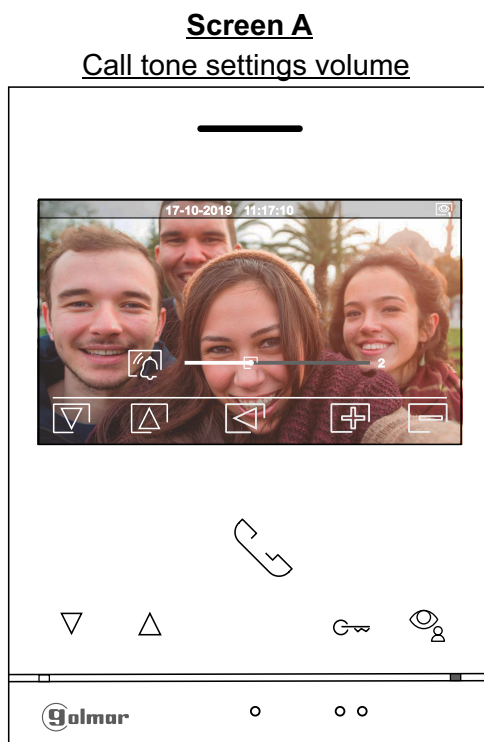



To exit the image and call / communication settings menu, press the button below icon .

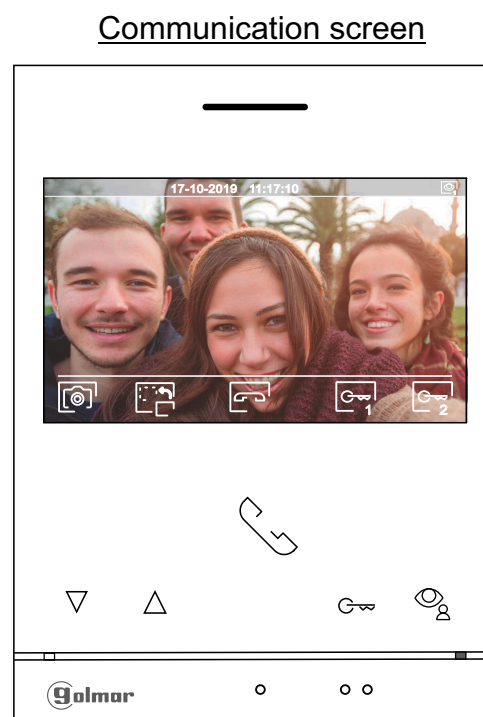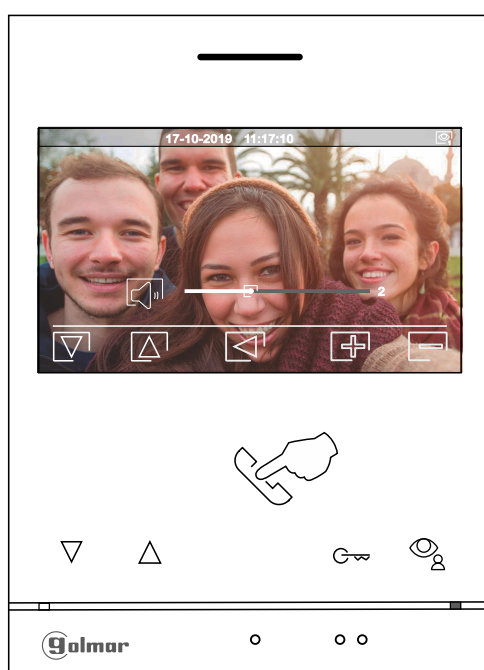

INTERCOM MENU





Access the intercom menu as described on p. 5. From this menu, you can contact another monitor(s) in your apartment (internal intercom) or other apartments (external intercom). For external intercom, the monitor(s) of the apartment that makes the call and the monitor(s) of the apartment that receives the call must have the intercom function enabled (see p. 8 - 9).


Select option  or  to perform an internal or external intercom call.








If during an intercom process with another monitor a call is received from the door panel, the intercom process will be terminated, and the door panel call will be received on the corresponding monitor.


Press the button below icon  to return to the main menu.

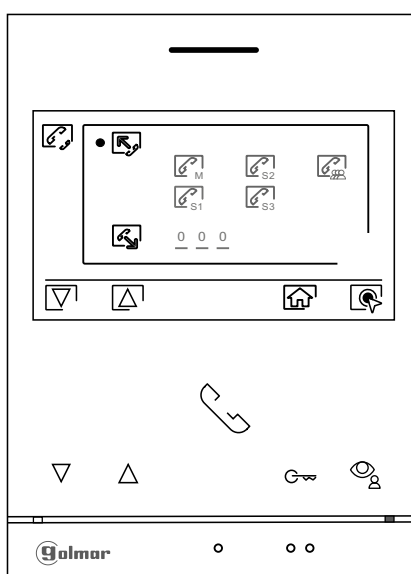

To make an internal intercom call (to another monitor(s) in the same apartment), go to the option with icon  by pressing the buttons below corresponding icons / and press the button below icon  to access the monitor selection menu (in the same apartment). Note: You will find information about the monitor itself with the address, Master, Slave 1 to Slave 3 of the monitor in the 'About' menu, (see p. 6).



Then press the buttons below icons / to select the monitor to be called and press the button below icon  to make the call. The monitor making the call will play a confirmation melody and indicate with a blink the code of the apartment called. To cancel the call, press the button below icon . Press the button below icon  to return to the intercom menu. The monitor receiving the call will play a confirmation melody showing on screen with a blink the monitor making the call. Press the button below icon  to establish communication and press the button below icon  to end communication.

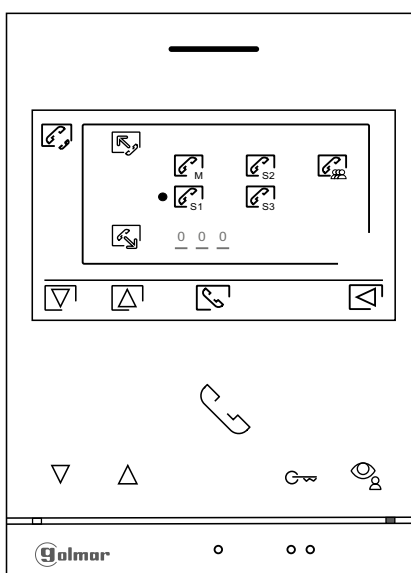

Continued overleaf


Continued from previous page.

INTERCOM MENU




To make an external intercom call (to other apartments), go to the option with icon by pressing the buttons below corresponding icons / and press the button below icon to access the code selection menu of the apartment with which you wish to communicate. (Intercom calls to other apartments are disabled by default, see p. 8 - 9).

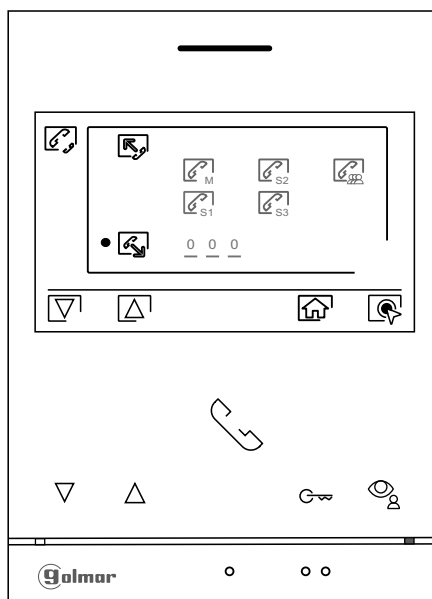






Note: The ART 4/G2+ monitor mounted with the SOUL S5110/ART 4 1P KIT does not allow this function.




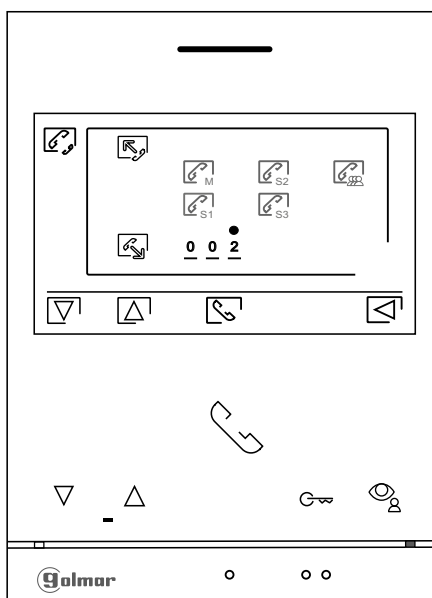





Press the button below icon to select the apartment code field to be modified, then press the buttons below icons / to modify with the apartment code to be called and press the button below icon to make the call. The monitor making the call will play a confirmation melody and indicate with a blink the code of the apartment called. To cancel the call, press the button below icon . Press the button below icon to return to the intercom menu. The apartment receiving the call will play a confirmation melody showing on screen with a blink the apartment making the call. Press the button below icon to establish communication and press the button below icon to end communication.




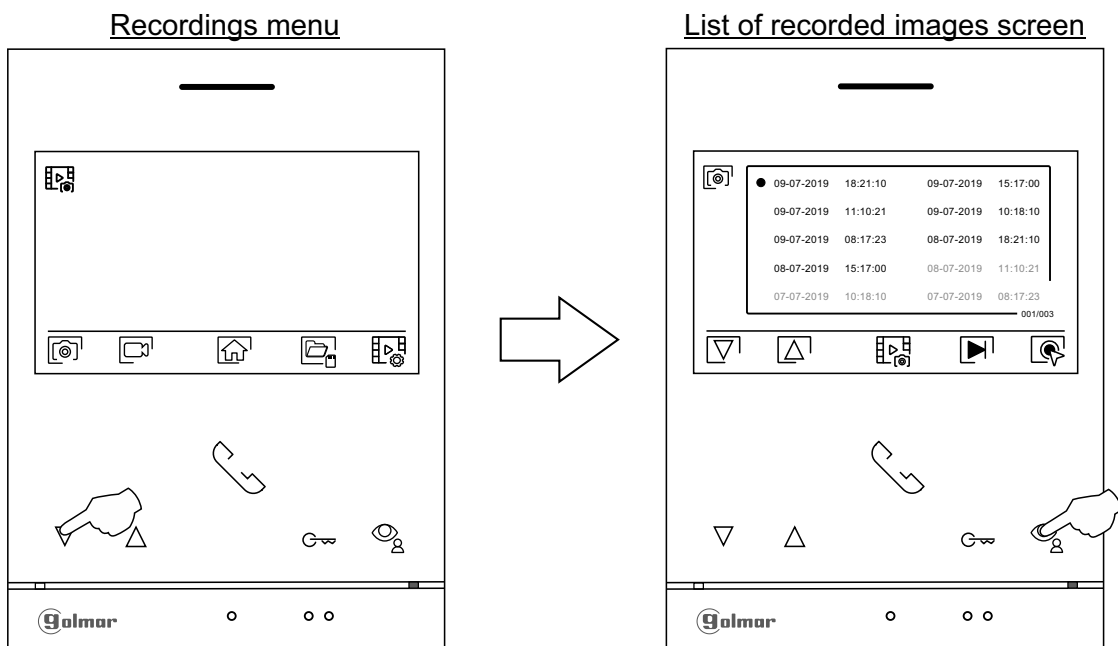RECORDINGS MENU

Access the recordings menu as described on p. 5. This menu displays the list of images saved in the memory of the device. If a MicroSD card is inserted in the monitor, images/videos will be recorded on the Micro SD card. Press the button below icon  to access the list of videos saved on the MicroSD card. To return to the recordings menu, press the button below icon . To access the list of images, press the button below icon . In the list of recorded images, those that have not been viewed are highlighted in white. There are 10 recordings per page and the number of pages is shown in the bottom right of the screen. Press the buttons below icons  /  to scroll through the images shown on the page and press the button below icon  to go to the next page (in carousel mode). On the screen containing the list of images, press the button under icon  to display the selected image.








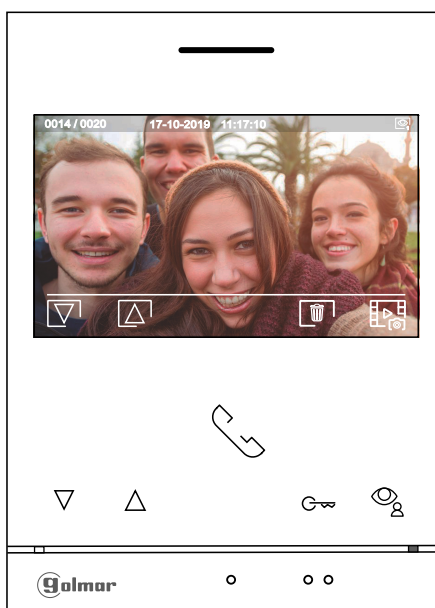
The image is then displayed in full screen, the number of recordings is indicated in the top left and the recording source is shown on the right (from door panel 1 to door panel 4 or camera 1 to camera 4, see pages 24 - 25). Press the buttons below icons  /  to show the next or previous recording respectively. To delete the recording shown on screen, press the button below icon  and then from the delete menu confirm the deletion of the recording by pressing the button below icon  or press the button below icon  to exit without deleting. To return to the list of images, press the button below icon .












Continued from previous page.

RECORDINGS MENU

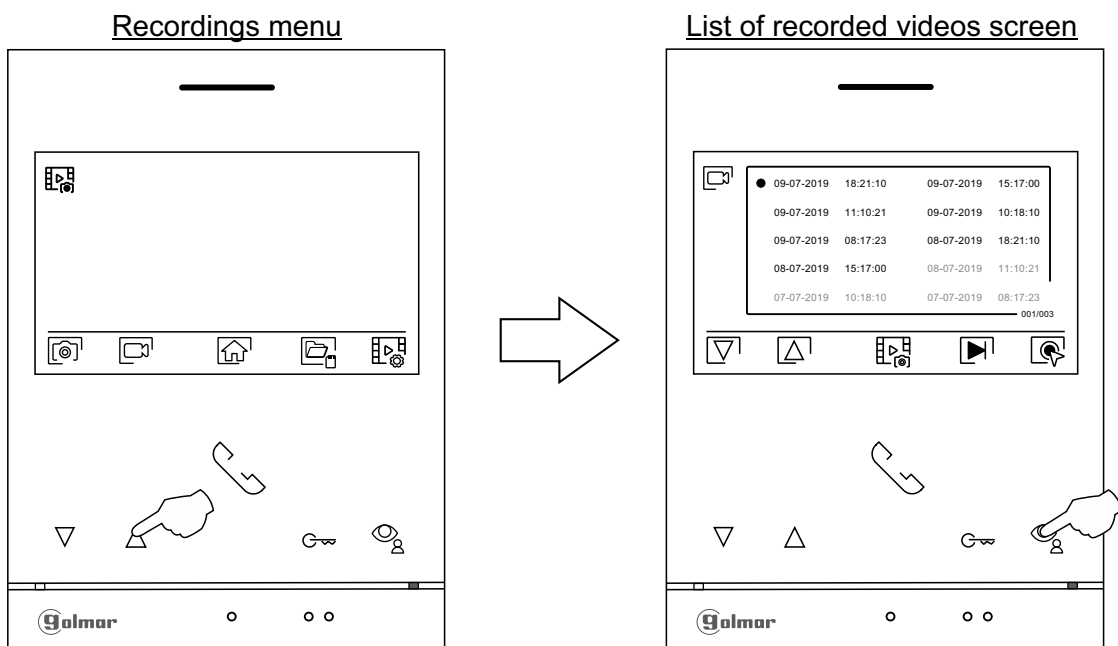If a MicroSD card is inserted in the monitor, press the button below icon  to access the list of videos. In the list of recorded videos, those that have not been viewed are highlighted in white. There are 10 recordings per page and the number of pages is shown in the bottom right of the screen. Press the buttons below icons / to scroll through the videos on the page shown and press the button below icon  to go to the next page (in carousel mode). On the screen containing the list of videos, press the button below icon  to display the video selected.



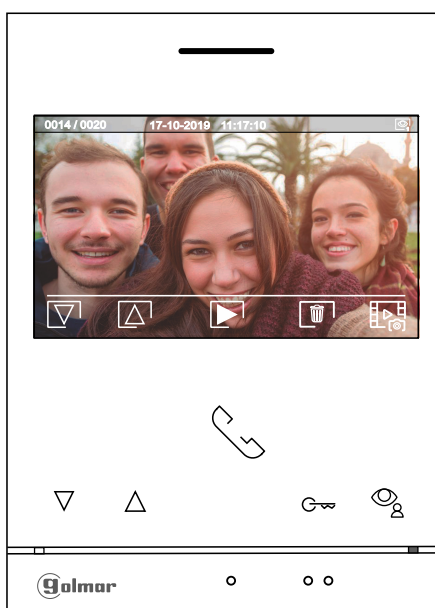

The video is then displayed in full screen, the number of recordings is indicated in the top left and the recording source is shown on the right (from door panel 1 to door panel 4 or camera 1 to camera 4, see pages 24 - 25). Press the buttons below icons / to show the next or previous recording respectively. To view the video shown on screen, press the button below icon  and, to stop video viewing, press the button below icon . To delete the recording shown on screen, press the button below icon  and then from the 'delete screen' confirm the deletion of the recording by pressing the button below icon  or press the button below icon  to exit without deleting. To return to the list of videos, press the button below icon .




Continued overleaf

Continued from previous page.


RECORDINGS MENU

To return to the recordings menu, press the button below icon . Then, to return to the main menu, press the button below icon .


List of recorded videos screen

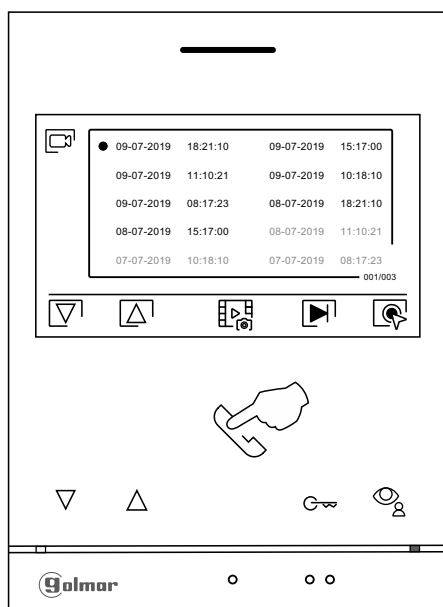

Recordings menu

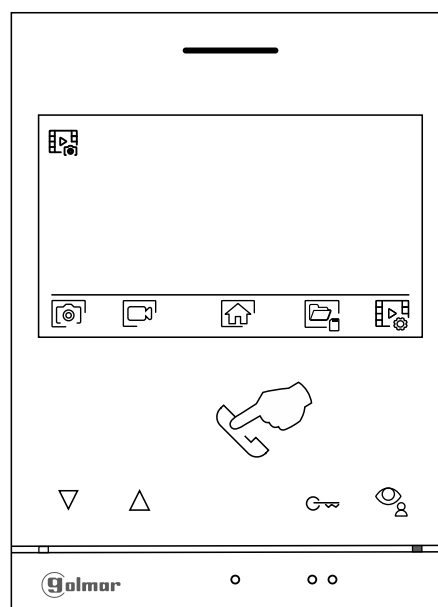


Main menu

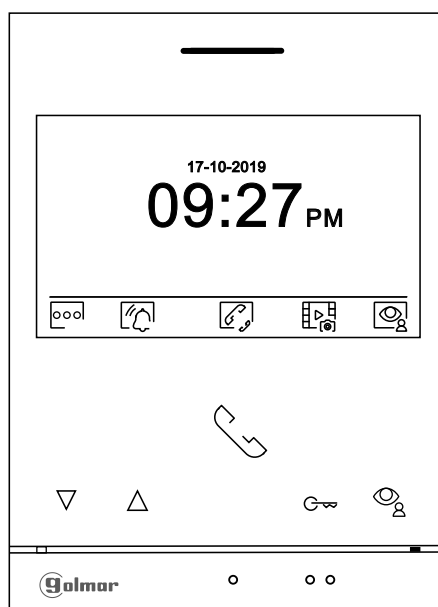

SPECIAL CODES

The enabling of some functions, as well as the modification of some factory parameters, can be carried out by entering special codes. To do so, the installer menu must be accessed from the monitor. Go to the 'About' screen in the Settings menu (p. 6) and press five times on button ▽ of the monitor.


'About' screen

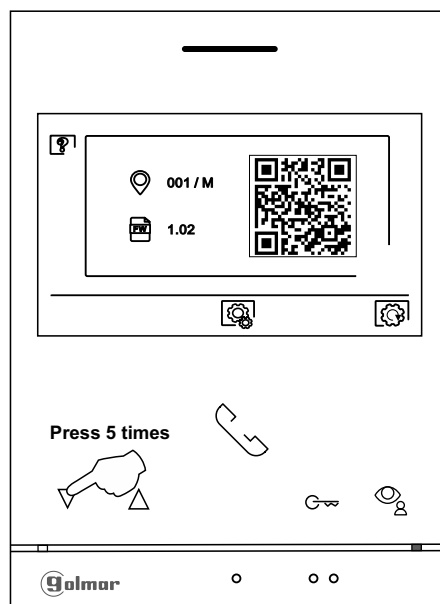

The 'special codes' screen will then be displayed. Press the button below icon ▽ to select the field to be modified and press the buttons below icons + / - to enter the desired code. Once the code has been entered, press the button below icon ✓ to validate it. If the code entered is valid, icon ✓ will be displayed; if it is not, icon ✗ will be shown.

Press the button below icon ◀ to return to the 'About' screen.

'Special codes' screen

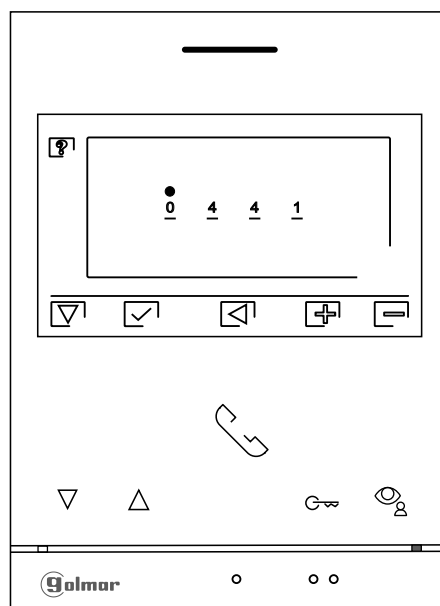

Continued from previous page.

SPECIAL CODES

Video sources available on a monitor (configure only on master monitor).

	<u>Visible</u>	<u>Not Visible</u>	<u>Factory setting</u>
Door panel 1	0111	0110	0111
Door panel 2	0121	0120	0120
(*) Door panel 3	0131	0130	0130
(*) Door panel 4	0151	0150	0150
Camera 1	0141	0140	0140
Camera 2	0181	0180	0180
(*) Camera 3	0171	0170	0170
(*) Camera 4	0191	0190	0190

(*) Important: In villa applications (Kit S5110/ART7 1P & Kit S5110/ART7W 1P) with SOUL/1, SOUL/2 and SOUL/4 door panels with versión V04 or later.

Automatic door opening upon reception of a call on a monitor (configure only on master monitor).


<u>Activated</u>	<u>Deactivated</u>	<u>Factory setting</u>
0441	0440	0440

Do not display the image on monitor when receiving a call from the door panel and the monitor is in "do not disturb" mode.

<u>Do not display</u>	<u>Display</u>	<u>Factory setting</u>
0481	0480	0480 (display image)

CLEANING THE MONITOR

- Do not use solvents, detergents or cleaning products that contain acids, vinegar or abrasive components.
- Use a soft damp lint-free cloth with water.
- Always wipe the monitor in the same direction, from top to bottom.
- After cleaning the monitor, remove any moisture with a soft dry lint-free cloth.

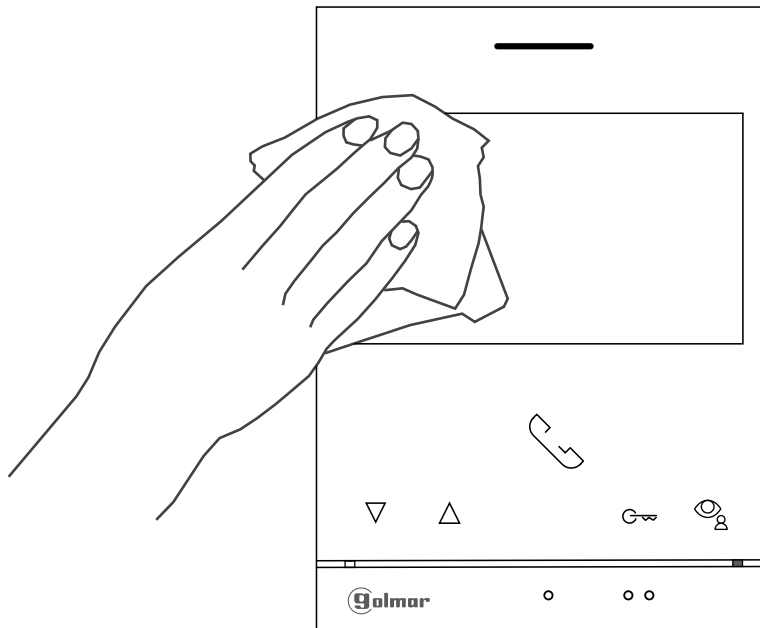

NOTES



golmar@golmar.es
www.golmar.es

GOLMAR S.A.
C/ Silici, 13
08940- Cornellà de Llobregat
SPAIN



Golmar se reserva el derecho a cualquier modificación sin previo aviso.
Golmar se réserve le droit de toute modification sans préavis.
Golmar reserves the right to make any modifications without prior notice.